

## Dura-Post™ & Dura-Post SX™

# Surface Mount Butyl Pad Installation Instructions

### For Installation on Asphalt or Concrete

**Caution: Always wear protective clothing and personal protective equipment (PPE) such as eye protection, work gloves, and steel toe work boots while doing the following work.**

1. Check that you have all parts necessary for the installation. You should have post(s), surface mount base(s) and butyl pad(s) (one pad per base).



2. Locate and mark Dura-Post location(s). A clean, dry surface is required.
3. Sweep or blow off area with compressed air to remove all gravel, sand and other debris within a one foot diameter where the base will be installed.

**Note: For optimum performance, the recommended installation temperature is 50°F or above. In lower temperatures, the bases and pads should be warmed to this temperature prior to use.**


4. Remove the release paper from one side of the Butyl Pad and place Butyl Pad on the ground with the exposed surface facing up.



5. Set the Dura-Post™ base on the Butyl Pad, centering it within the edges of the pad. Press on the base to secure it to the pad.



6. Lift the base and remove the remaining release paper from the other side of the pad.
7. Place the base in position with the arrow facing traffic. Press base down firmly on surface.

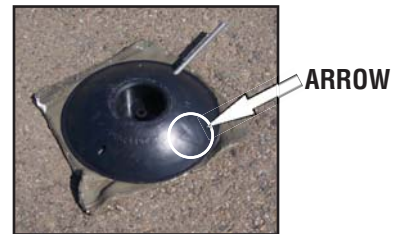

8. To properly set the base, rest one of a vehicle's front tires on top of the base for 5 seconds.



9. Insert the post and drive the securing pin in place with a hammer. To remove the post, use a drift pin to remove the securing pin, then lift post from base.

